



Feature Description Document

Configuring IXM Link for Siemens SiPass



Purpose

This document outlines the process of configuring IXM Link to sync users between Invixium's IXM WEB and Siemen's SiPass integrated software.

Applies to

TITAN	TFACE	TOUCH 2	SENSE 2	MERGE 2	MYCRO
All Devices	All Devices	All Devices	All Devices	All Devices	All Devices

Description

IXM Link is a licensed module in IXM WEB that helps to synchronize the user database between IXM WEB (from where biometric enrollment for users is performed) and leading Access Control Panel Software (from where access rules for the users and the organization are managed).

This FDD will describe how to set up and configure IXM Link if you are using Siemen's SiPass integrated software to keep IXM WEB users in sync with SiPass by using its APIs to import and export users and their cards.



Requesting a License

1. From **Home** >> Expand the **Left Navigation Pane** >> Select the **License** tab >> Click on the **SiPass (Siemens)** icon.

A screenshot of the 'SiPass Activation' dialog box. The title bar shows 'SiPass Activation' and a close button. Below the title bar, the word 'DEVICES' is displayed. There are nine radio button options arranged in a 3x3 grid: 'Up to 5 (free)', '6 to 20' (selected), '21 to 50', '51 to 100', '101 to 200', '201 to 300', '301 to 500', '501 to 1000', and 'Registered devices[1]'. A 'Request' button with a checkmark is located below the grid. Below the radio buttons is an 'Activation Key' label and an empty text input field. To the right of the input field is an 'Activate' button with a checkmark. At the bottom center is a 'Cancel' button with an 'X' icon.

2. Select the required license based on the number of devices and click **Request** to see the details and send them to Invixium support to request a license.



- 3. The details screen will vary based on whether [SMTP settings are configured](#) in IXM WEB:
 - a. If SMTP settings are not configured, a “Copy to Clipboard” icon will appear.

Request ×

Date Requested	06/21/2022
Time	6:26 PM
License Request	1 Devices
Machine Key	
Module	SiemensSiPass
Version	2.2.250.0

Send above details to support@invixium.com

Send Cancel

Click to copy the details and paste them in an email to support@invixium.com to start the licensing process.



- b. When SMTP settings are configured, a “Send” button and “Copy to Clipboard” icon will appear.

Request ×

Date Requested	06/21/2022
Time	6:26 PM
License Request	1 Devices
Machine Key	
.	
Module	SiemensSiPass
Version	2.2.250.0

Send above details to support@invixium.com


Click **Send** to directly email the details displayed to Invixium support to start the licensing process.



- Once you receive the license key from Invixium, go back to the same page from where you requested the license and input the license key in the Activation Key field as shown below.

A screenshot of a software dialog box titled "SiPass Activation". It contains a "DEVICES" section with radio button options for device counts: "Up to 5 (free)", "6 to 20" (selected), "21 to 50", "51 to 100", "101 to 200", "201 to 300", "301 to 500", "501 to 1000", and "Registered devices[1]". Below these options is a "Request" button. Underneath is an "Activation Key" field with a blacked-out key and an "Activate" button. At the bottom is a "Cancel" button.

- Click **Activate** to activate the license.

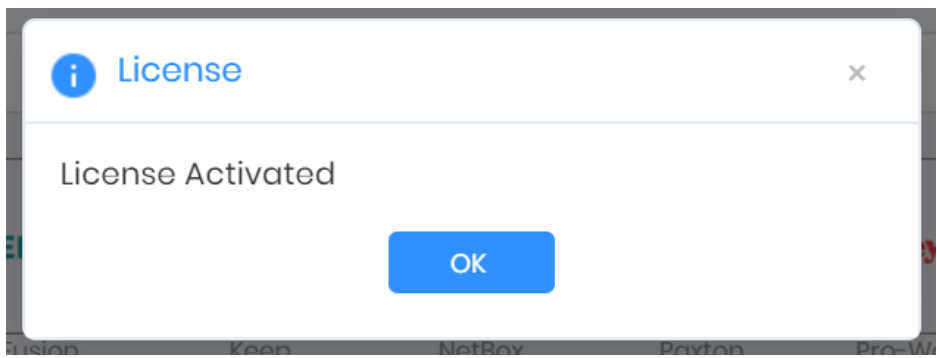



Configuring Wiegand to Output Siemens SiPass

1. Register all IXM devices.
2. From **Home** >> Click the **Devices** tab on the top.
3. Select any device.
4. Navigate to the **Access Control** tab for the selected device >> Click on **Wiegand**.

Wiegand Output ☑ ^

Wiegand	ID Type User ID ▼	Duress None ▼	
Identification	Success None ▼	Fail None ▼	
Verification	Success None ▼	Fail None ▼	
Anti-Shock	Format None ▼	ID Value Device Serial Nu. ▼	
Heart Beat	Format None ▼	ID Value Device ID ▼	Interval (sec) 60 ▲▼
User not found	Format None ▼		

Pulse (µsec)

Width 40 ▲▼	Interval 2000 ▲▼
----------------	---------------------


Apply Reset




5. Toggle the switch on the right to enable Wiegand Output for the device.
6. Set ID Type of output Wiegand to Employee ID/Default/Actual Card as displayed:

Note: Invixium devices can have up to 512-bits customizable Wiegand format. The default output is Standard 26-bit. To change the output to a different Wiegand format, refer to the [Configuring Wiegand document](#).

EVENTS

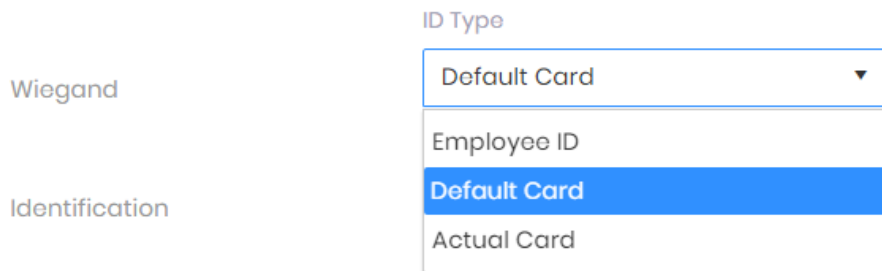


7. Click **Apply**.
8. This will update the Wiegand Output settings of the device selected in step 3.
9. If you have more devices, then follow the next steps to copy all Wiegand settings to all devices simultaneously. *Note: This copies all Wiegand output settings.*
10. From **Home** >> Click the **Devices** tab on the top >> Select the device in step 3 >> Click on **Broadcast** on the right.

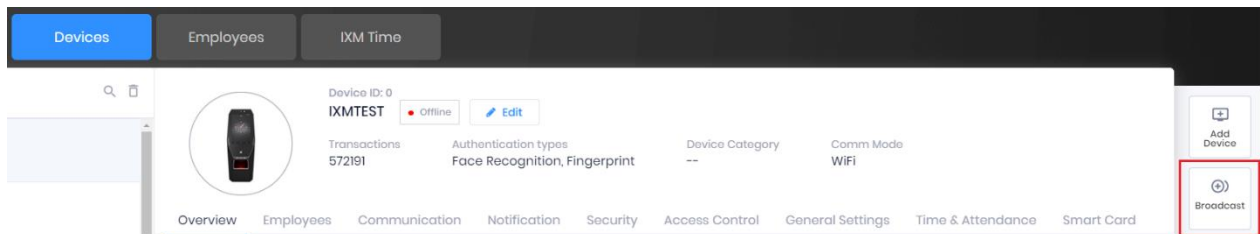




11. Select the device for which you've set the ID Type above and check Wiegand output in Access Control section as displayed:

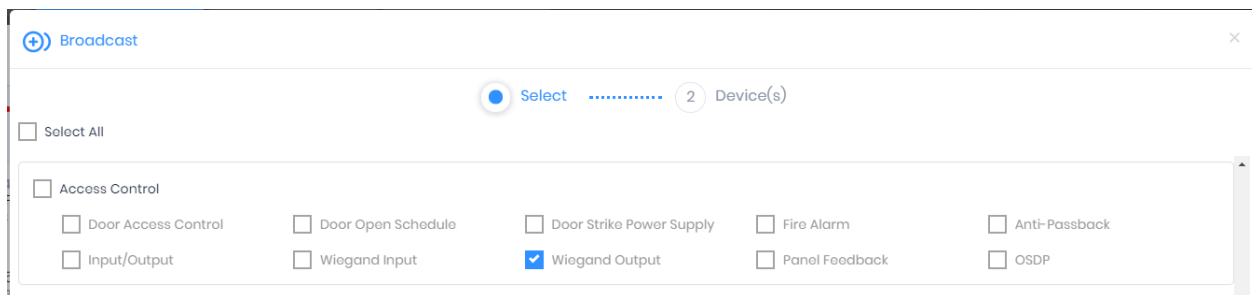

12. Click **Broadcast** and select the rest of the devices in the popup as displayed. Click **OK** to copy all Wiegand output settings of the source device to all destination devices at once.

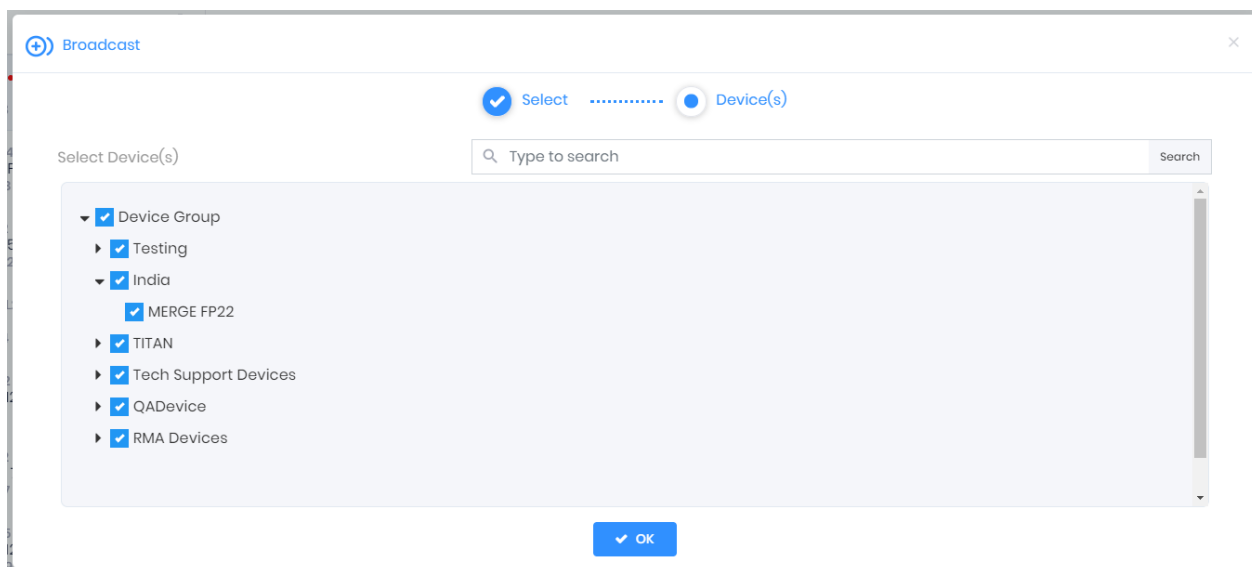



Field Mappings


Below are the Siemens SiPass fields mapped with IXM WEB.

SiPass Field	IXM Field	Notes
First Name	First Name	
Last Name	Last Name	
Employee Number	User ID	
Address	Address – 1	
Phone Number	Office Phone	
Mobile Number	Mobile	
Email Address	Email	
Start Date	Start Date	If this is null in IXM WEB, then the sync process will set this as the start date as SiPass doesn't accept an empty values.
End Date	End Date	For the case when this is null in the SiPass database which in SiPass software means access till the next 100 years we set this to the same i.e. today's date + 100 years in IXM WEB which roughly means the same for all practical purposes.
PIN	PIN	
Card number	Prox ID	
Imaging	Photo	
Workgroup	Department	A workgroup is mandatory in the case of Sipass users, hence if the Sipass license is activated, the department field becomes mandatory in IXM WEB while

		adding/updating users.
--	--	------------------------

Configuring LINK for Siemens SiPass

1. From **Home** >> Expand the **Left Navigation Pane** >> Select the **IXM Link** tab >> Click the **Siemens** icon. By default, the Siemens SiPass configuration is turned OFF.

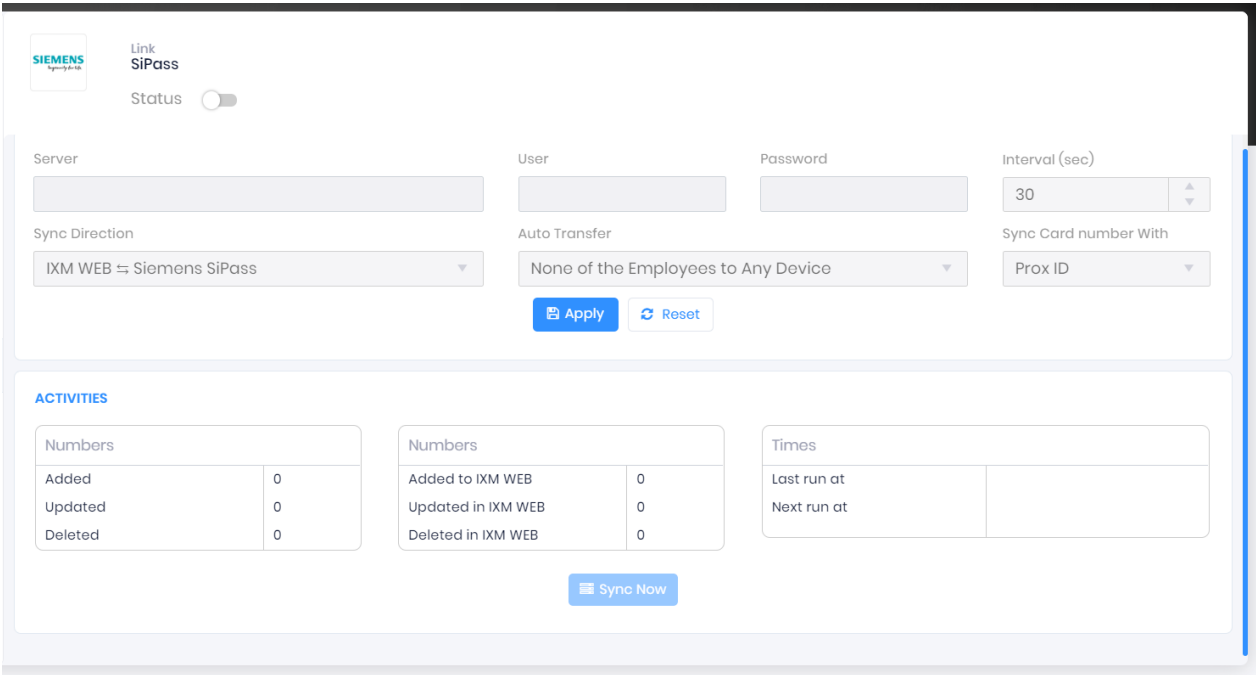

Link SiPass
Status

Server: User: Password: Interval (sec): 30

Sync Direction: IXM WEB ⇌ Siemens SiPass Auto Transfer: None of the Employees to Any Device Sync Card number With: Prox ID

Apply Reset

ACTIVITIES

Numbers	
Added	0
Updated	0
Deleted	0

Numbers	
Added to IXM WEB	0
Updated in IXM WEB	0
Deleted in IXM WEB	0

Times	
Last run at	
Next run at	

Sync Now

2. Enable editing configuration by toggling the switch next to the logo to **ON**. Data is not synced when the configuration is applied with this switch in the OFF position.



Link
SIEMENS SiPass
Status

Server 192.168.1.120	User siemens	Password	Interval (sec) 30
Sync Direction IXM WEB ⇄ Siemens SiPass	Auto Transfer No	Employee Group Select value	

Apply Reset

3. Each configuration setting is explained below:

Server: IP address of the server where Siemens SiPass is installed.

User: User Name to log into SiPass software.

Password: Password to log into SiPass software.

Interval (sec): Latency acceptable between data transfers.

Sync Direction:

- 1. Sync data from Siemens SiPass to IXM WEB.
- 2. Sync data from IXM WEB to SiPass.
- 3. Sync data both ways. A link will update IXM WEB first and then SiPass.


Auto Transfer:

- No: Employees synchronized from Siemens SiPass will not be automatically added to any of the employee groups present in IXM WEB.
- Yes: On selecting 'Yes' for Auto Transfer, the employee group selection dropdown enables, which displays all the employee groups present in IXM WEB. All the employees synchronized from Siemens SiPass will be automatically added to the employee group selected on the Link Configuration Page.




Employee Group: Selection of employee group needs to be done to use the Auto transfer functionality.

4. Click **Apply** to save the settings.

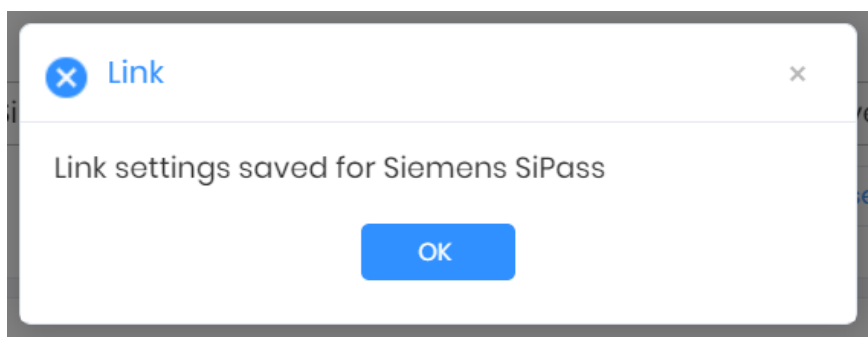

Visiting this view while main switch is ON collapses Configuration section and expands Activity section.

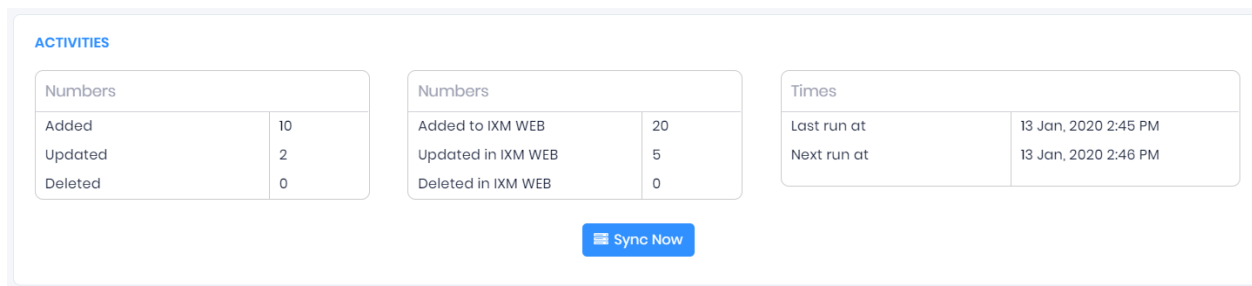

Here you can see some data pertaining to last and next run times.

Clicking **Sync Now** immediately starts synchronizing pending data. This is useful when you don't want to wait until the next scheduled run which is shown in Next Run At.



When data is syncing at the given interval, the numbers on the view will change accordingly.

Multiple Cards

Siemens SiPass can have multiple cards per user but IXM WEB supports only one Prox card. Link selects the first available valid card.



Support

For more information relating to this Feature Description document, please contact us at support@invixium.com

Disclaimers and Restrictions

This document and the information described throughout are provided in their present condition and are delivered without written, expressed, or implied commitments by Invixium Inc. and are subject to change without notice. The information and technical data herein are strictly prohibited for the intention of reverse engineering and shall not be disclosed to parties for procurement or manufacturing.

This document may contain unintentional typos or inaccuracies.

TRADEMARKS

The trademarks specified throughout the document are registered trademarks of Invixium Access Inc. All third-party trademarks referenced herein are recognized to be trademarks of their respective holders or manufacturers.

Copyright © 2022, INVIXIUM. All rights reserved.