



Feature Description Document

Understanding PassThru Wiegand Format



Purpose

This document describes the functional specifications of the PassThru Wiegand feature.

Applies to

TITAN	TFACE	TOUCH 2	SENSE 2	MERGE 2	MYCRO
All Devices	All Devices	All Devices	All Devices	All Devices	All Devices


Description

IXM WEB allows users to create a PassThru Wiegand Format. A PassThru Wiegand format is a customized format when compared to the 26-bit standard format. This Wiegand format string does not contain any parity bits or facility code bits. The format string of this Wiegand type will only contain ID code. An admin can change the total number of bits in the string and the total number of ID code bits within the string. Maximum length of PassThru Wiegand format is 512 bits.




Creating PassThru Wiegand

1. From Home >> Expand the left navigation pane >> Navigate to **General Settings** >> **Wiegand** tab to Manage Wiegand.

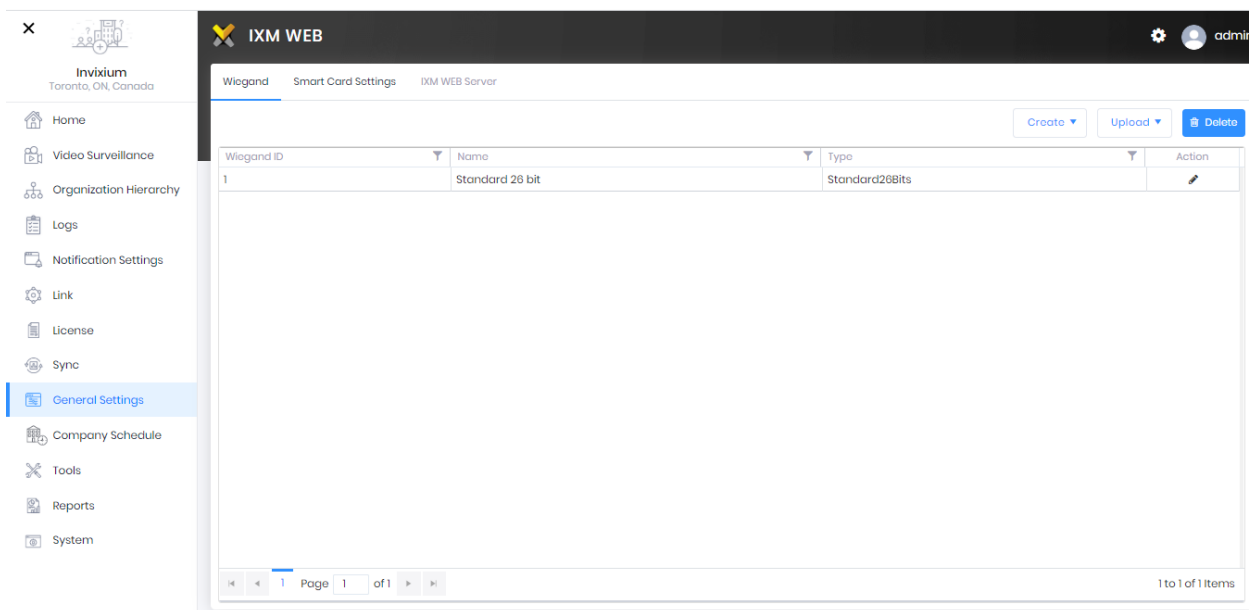

2. Under the **Wiegand** tab, click on the **Create** dropdown and choose the **“Passthru”** option from the menu.

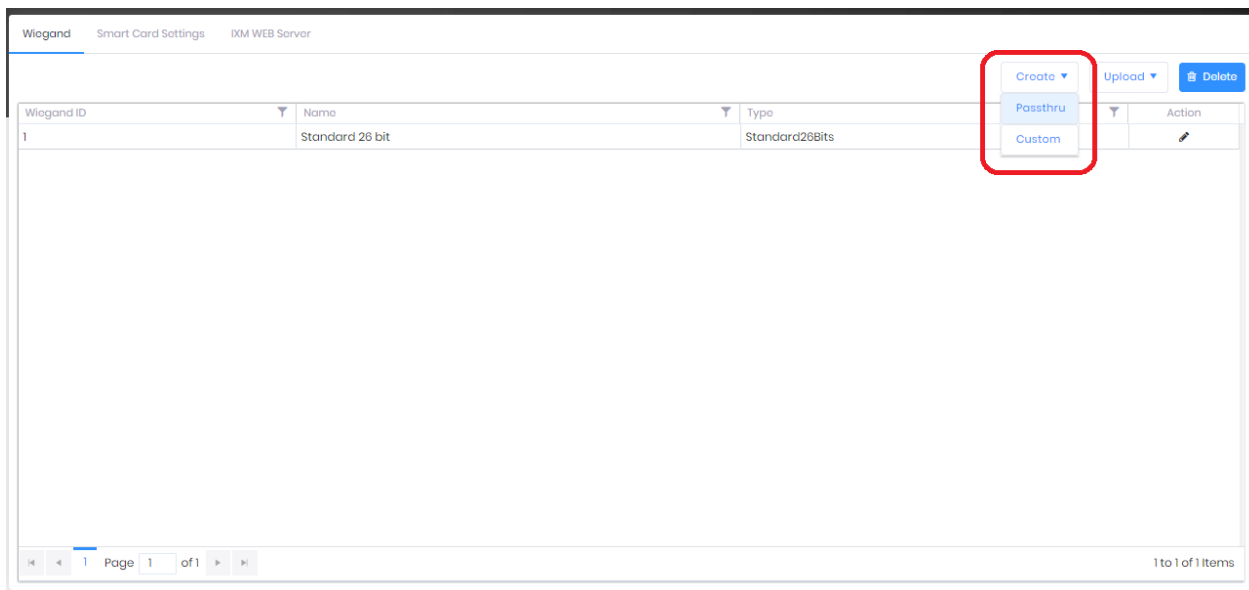



3. It will open the Create PassThru Wiegand Format page.

4. Provide the details for “Wiegand Name”, “Total Bits” and “ID Bits”.

5. Select the position of ID bits to create an ID bit mask and click **Save**. (The number of **ID Bit Mask** positions selected should be equal to the number of **ID bits**)

6. Click **Save** to create a new PassThru Wiegand format.



7. Click **OK** and the application will redirect to the Wiegand list window.

Wiegand ID	Name	Type	Action
1	Standard 26 bit	Standard26Bits	
2	10bit Pass	Passthru	

Page 1 of 1 | 1 to 2 of 2 Items


8. Select the Wiegand which was recently created, go to “Upload” and click “Selected”.

Wiegand ID	Name	Type	Action
1	Standard 26 bit	Standard26Bits	
2	10bit Pass	Passthru	

Upload dropdown menu: Selected, All


Page 1 of 1 | 1 to 2 of 2 Items

9. The application will display a list of devices. Select the required devices where the Wiegand needs to be uploaded and click **OK**.

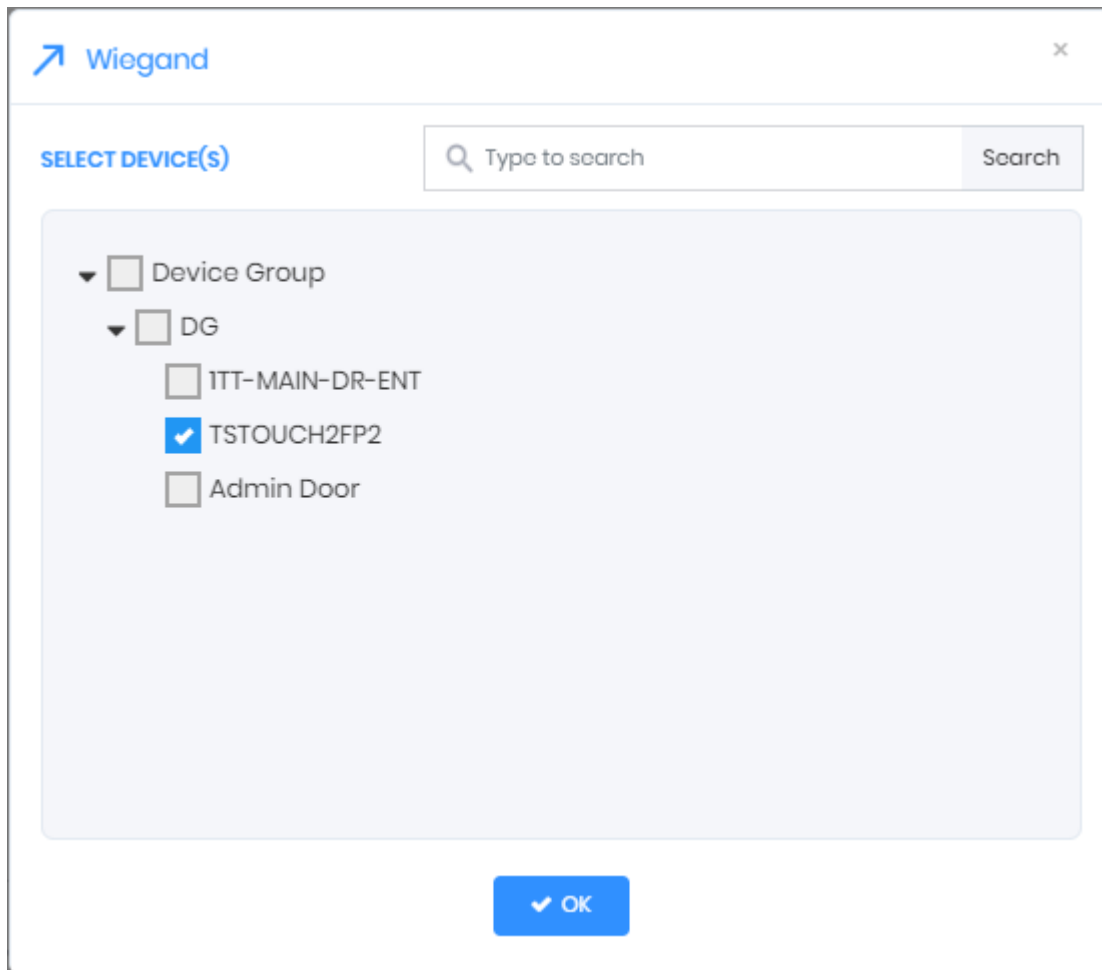



10. The Application Logs window will appear, which displays the status – Success/Fail.

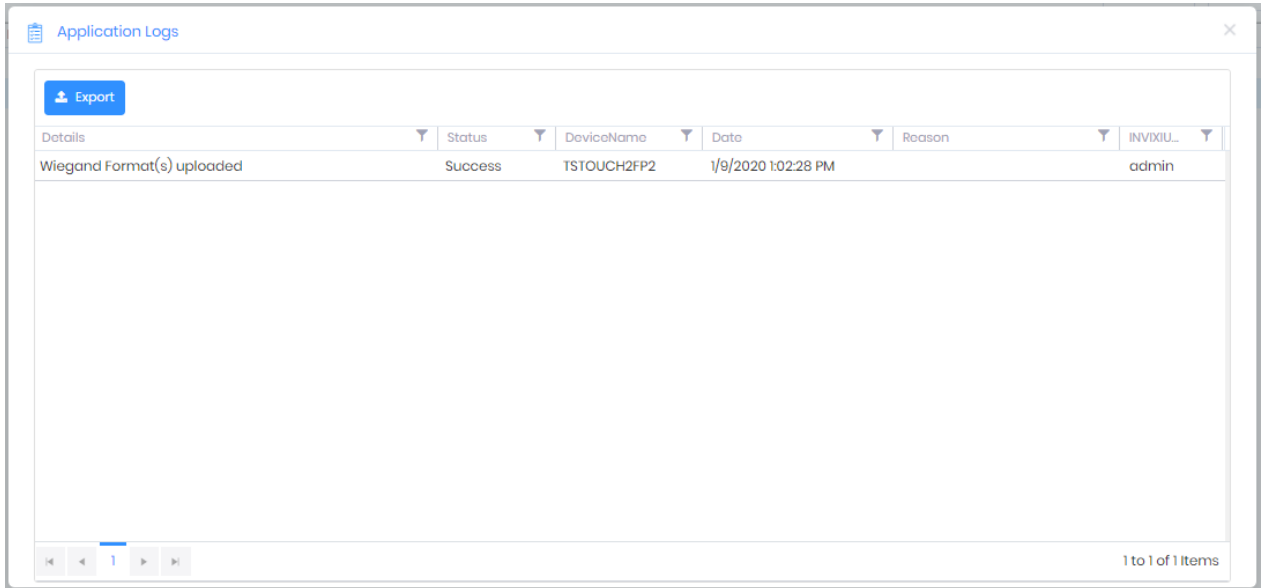



FAQ

1. Who can create PassThru Wiegand in IXM WEB?

All IXM WEB users who have access to General settings can create a PassThru Wiegand in IXM WEB.

2. What is the maximum length of PassThru Wiegand?

Users can create a PassThru Wiegand upto 512 bits long.



Support

For more information relating to this Feature Description document, please contact us at support@invixium.com

Disclaimers and Restrictions

This document and the information described throughout are provided in its present condition and are delivered without written, expressed, or implied commitments by Invixium Inc. and are subject to change without notice. The information and technical data herein are strictly prohibited for the intention of reverse engineering and shall not be disclosed to parties for procurement or manufacturing.

This document may contain unintentional typos or inaccuracies.

TRADEMARKS

The trademarks specified throughout the document are registered trademarks of Invixium Access Inc. All third-party trademarks referenced herein are recognized to be trademarks of their respective holders or manufacturers.

Copyright © 2022, INVIXIUM. All rights reserved.