



Feature Description Document

Understanding Biometric Schedules



Purpose

This document provides information to understand Biometric Schedules.

Applies to

TITAN	TFACE	TOUCH 2	SENSE 2	MERGE 2	MYCRO
All Devices					

Description


Biometric schedules are used when the device is in verification mode and it is no longer required to verify the user with fingerprint during specific times. During these times, the users will not be required to authorize themselves using biometrics (fingerprints) and will be able to enter the area without any biometric access control, using only card or PIN or neither (if required).

INVIXIUM XAD-FDD-509-02G



Configuring Biometric Schedules

- 1. From Home >> Click **Devices** tab on the top >> Select the required **Device >>** Navigate to the **General Settings** tab for the device >> Click **Biometric Schedule**.
- 2. Toggle Biometric Schedule to **ON** from the right side of the tab.

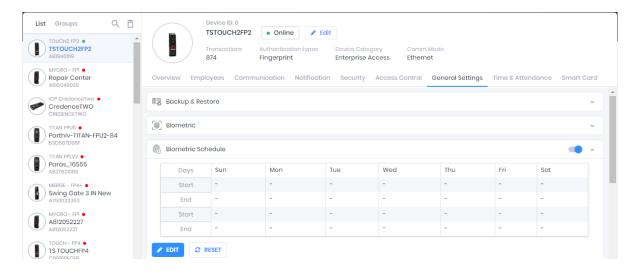



3. Click **Edit**. This will open a Biometric schedule selection window. Select days and times when fingerprint authorization is not required.



- 4. Users can click **Copy** to use the same schedule duration set for the previous day. i.e. If on Monday the schedule is created for 09:00 AM to 05 PM, the user can click **Copy** to repeat the same schedule duration for Tuesday.
- 5. Click **Apply** to save the settings on the device.



Support

For more information relating to this Feature Description document, please contact us at support@invixium.com

Disclaimers and Restrictions

This document and the information described throughout are provided in its present condition and are delivered without written, expressed, or implied commitments by Invixium Inc. and are subject to change without notice. The information and technical data herein are strictly prohibited for the intention of reverse engineering and shall not be disclosed to parties for procurement or manufacturing.

This document may contain unintentional typos or inaccuracies.

TRADEMARKS

The trademarks specified throughout the document are registered trademarks of Invixium Access Inc. All third-party trademarks referenced herein are recognized to be trademarks of their respective holders or manufacturers.

Copyright © 2022, INVIXIUM. All rights reserved.

INVIXIUM XAD-FDD-509-02G